

ENCLOSURE ZERO U UNIVERSAL, BLACK

1. SCOPE

This document will describe the application instructions for **ZERO U ENCLOSURE**.

2. PRODUCT DESCRIPTION

ENCLOSURE ZERO U UNIVERSAL, BLACK

For additional information refer PSD_ 180670024

3. INSTALLATION PROCEDURE.

For fiber/Copper solution

Step 1:, Unscrew the CSK screws fixed on the top cover as shown(**Fig:1**) location below and open the top cover plate from the base enclosure (**Fig:2**) (Top cover can open up to 180°).

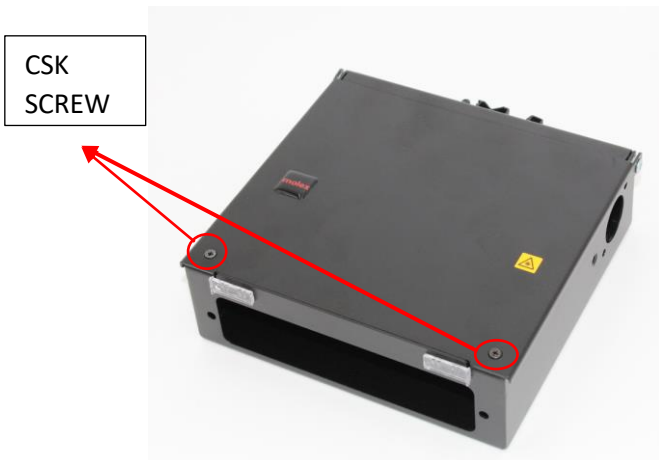


Fig:1



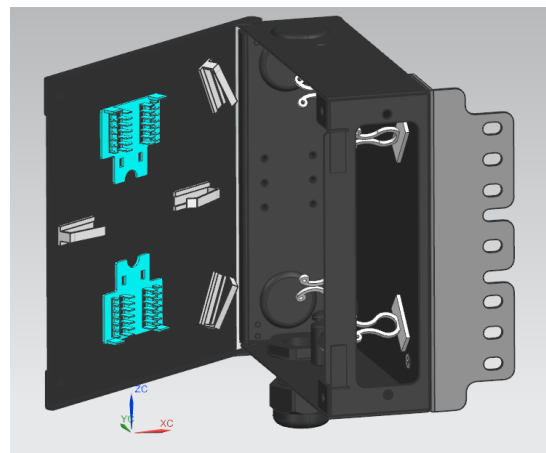



Fig:2

Step 2: Install the Zero Brackets using CSK screw's as shown.

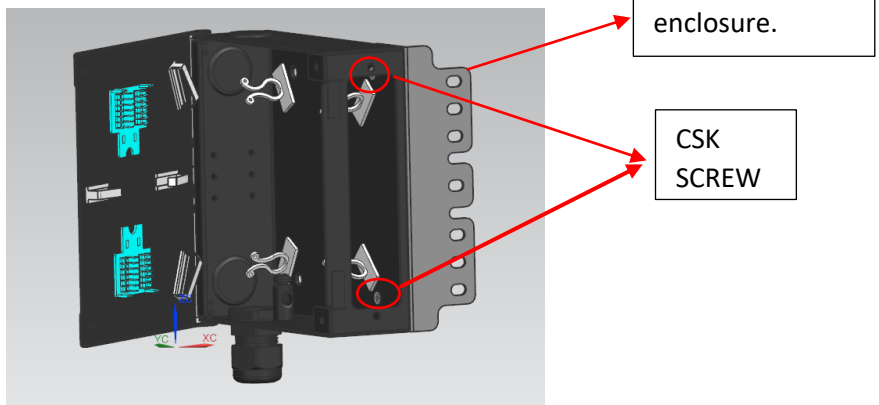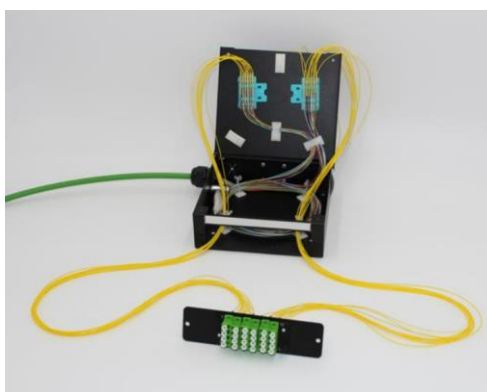

ENGINEERING RECORD NO : 792300	SAP NO : 187000584	Doc No: 187000584	Doc part: AS	REV- A
http://www.molexces.com				

Step 3: Close the Top cover and screw it.

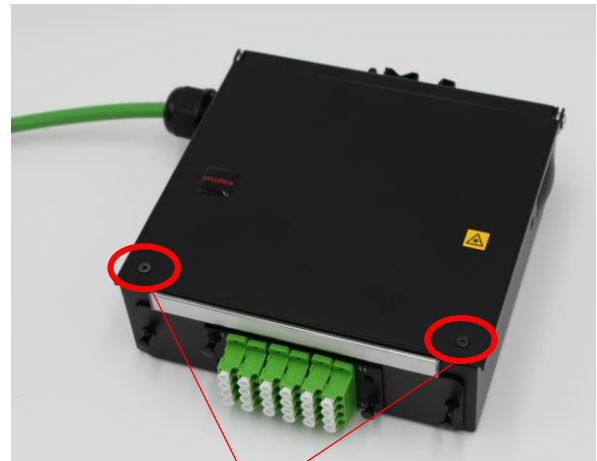

Screws

Step 4: Install the assembled enclosure to the 19th Inch Rack/cabinets using standard mounting accessories. **(Suitable for cabinets with width 800mm or above, min. 60mm width required on the side of cabinets)**



Note: All pictures are shown only for representation purpose only.